
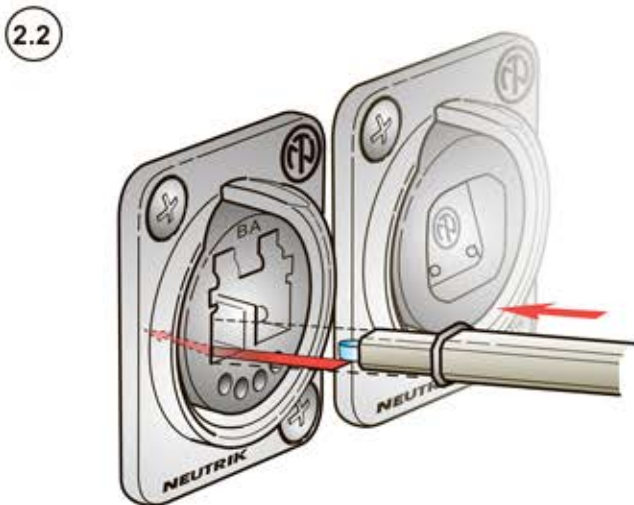


Chassis Connector Maintenance

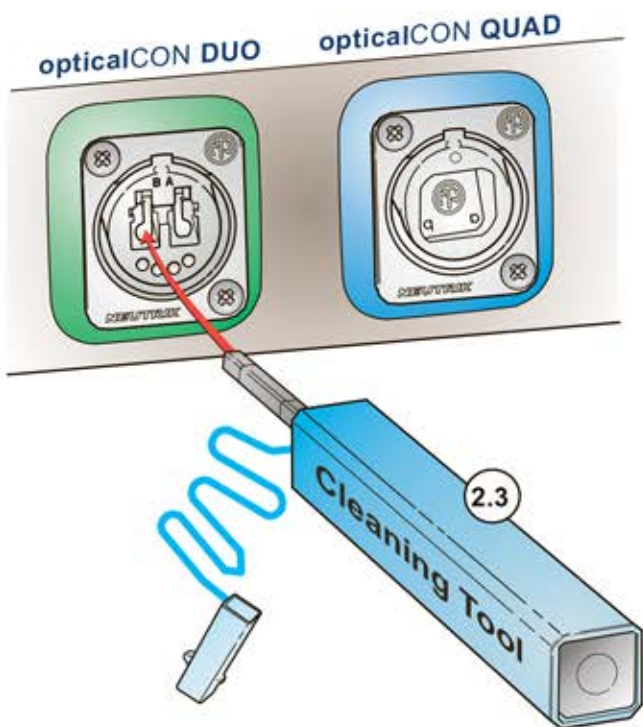

1. Wet cleaning using lint-free wipes

Remove LC connectors at the rear of the opticalCON chassis and follow the instructions A. 3 to 9.

2. Dry cleaning using FOCD-DC125

- 2.1 Remove Dust cap. Insert the stick of the cleaning device.
- 2.2 Make sure that the insertion position is on the bottom of the LC connector hole in order to hit the sealing shutter release bar.
- 2.3 Push the outer shell to start cleaning the LC connector end face.
A "pop" sound indicates end of cleaning process.
- 2.4 Remove the cleaning device and put dust cap over the stick.